


*Advanced*  
REFLEXES

Alcatel OmniPCX 4400



ALC▲TEL

## GETTING TO KNOW YOUR TERMINAL

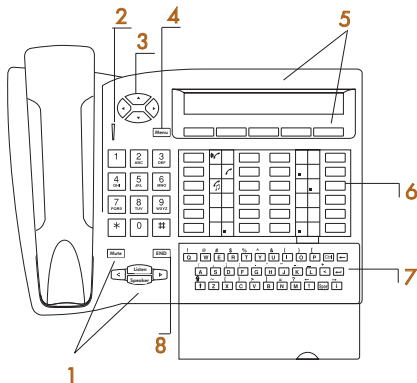

### 1 Audio keys:

**Listen:** to share a conversation, via the station speaker

To reduce station speaker or handset volume






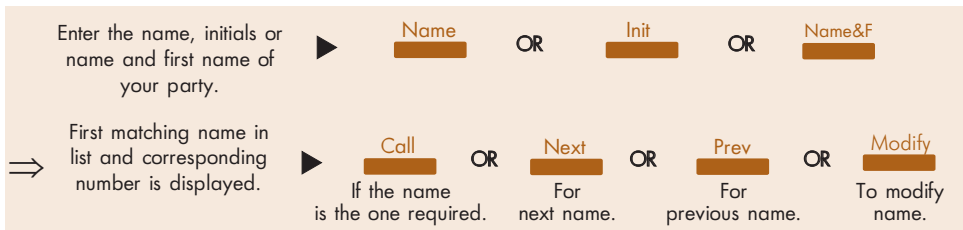
To increase station speaker or handset volume

For Hands-free operation

**Mute** key - to turn off mic, or to set

**Interphone mode** - to leave mic "on" (indicated by flashing light) - to answer an internal call immediately - without lifting the handset.

- 2 **LED (green)** - indicates messages have been received.
- 3 **Navigator** - to scan pages of the display and select a line (bottom line is active by default).
- 4 **Menu key** - to program your terminal or to display information.
- 5 **Display** - two-line display offers several pages of call information and lists functions available, via **Display keys** (symbol ) soft-keys which change dynamically to offer context features.
- 6 **Pre-programmed Keys, Programmable Keys, and Corresponding Icons**  
These keys (symbol ) are either line keys or feature keys, with corresponding icons.
- 7 **Dial-By-Name - Using the Alphabetic Keyboard** (key symbol )  
Open the cover to use the keypad.




- 8 **END** to terminate a call or programming.



## EASE OF USE (setting up)

### ADJUSTING THE DISPLAY AND ICON VIEWING ANGLE

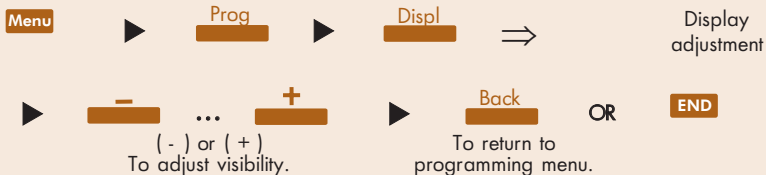

### SELECTING RINGER MELODY AND ADJUSTING VOLUME



### PROGRAMMING YOUR PERSONAL DIRECTORY - FOR SPEED DIALING



## YOUR CALLS (making a telephone call)

### • To make a call



Dial directly.

OR



Lift the handset.



Dial the number required.

### • To terminate a call



Hang up.

OR

END

Press.

### MAKING AN EXTERNAL CALL



Press  
9



Dial the  
number required.



6035551234

The number dialed  
is displayed.

### MAKING AN INTERNAL CALL



Dial the  
number required.



Smith 4001

Name of and number  
you have called is displayed.

### CALLING USING YOUR PERSONAL DIRECTORY

Press the station or display  
key you have programmed  
for the required name.

OR



Use the Navigator key to access  
the pages that follow, then press the key for desired name.

### CALLING USING THE SYSTEM DIRECTORY



Enter system "Speed Dial" No.

### REDIALING THE LAST NUMBER DIALED (Redial)

REDIAL

REDIAL

 


6035551234

No. dialed is displayed.

## YOUR CALLS (handling several calls)

### CALLING ANOTHER NUMBER DURING A CALL



### ACCEPTING A SECOND CALL



### TRANSFERRING A CALL (during the call)



 
### SWITCHING BETWEEN ONE CALL AND ANOTHER (Broker)

While in conversation (with another call on hold) - to switch to the other call:



### THREE-WAY CONFERENCE


When in conversation with one party, and another call is on hold, you can:




## IN YOUR ABSENCE

All these functions can be obtained by programmed key or by dialing the corresponding code.


### FORWARDING YOUR CALLS TO ANOTHER NUMBER

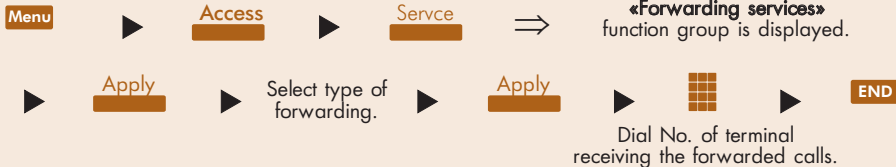


### FORWARDING YOUR CALLS TO A VOICE MESSAGE SYSTEM

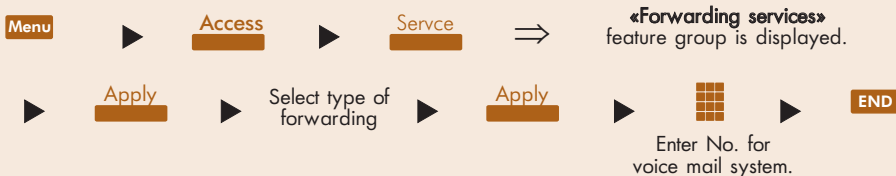

### REVIEWING YOUR MESSAGES

 Light and icon  indicate that Text or Voice messages (or Callback requests) are waiting for you:





## OTHER FEATURES

### CANCELING FORWARDING FROM YOUR TERMINAL



 
 
### REQUESTING CALLBACK (Internal only)

When your party does not reply or number is busy.



### PROGRAMMING A FEATURE (OR NUMBER) ON A KEY

The list of programmable features can be found in your User guide.



Name: ..... Tel. No.: .....  
Fax No.: ..... Mobile No.: .....  
Email address: ..... PWT No.: .....

Quick guide - Ref. 3AK 19524 USAB Ed. 01

For information regarding compliance, please refer to the corresponding user guide.  
Alcatel® and the Alcatel logo are registered trademarks of Alcatel. OmniPCX™ and REFLEXES™  
are trademarks of ALCATEL.

The functionality described in this brochure is subject to change without notice.

